



Installation Instructions

1. Connection

- Insert the two rubber grommets into the two cable entry holes at the bottom of the case.
- Insert the mains supply cable through the bottom holes and connect with terminal block as shown.
- Reassemble case and secure top cover. Align the triangle symbols on the top and bottom cases.

2. Mounting

- Mount the unit on either a pole or a wall using appropriate mounting screws or bolts.
- Do not mount the unit beneath the light that it operates!

3. Setup & Operation

- Adjust the lux setting when the ambient light is at the level you wish the switching to occur.
- Turn the LUX setting fully anti-clockwise then slowly turn clock-wise until the LED is illuminated. The relay will switch approx. 60 secs. after LED has lit.
- Adjust the timer setting to control the "Time-On" from 1-8 hours.
- Also, you can set to turn off when ambient light rises above the set level, by turning the adjustment to "Dusk to Dawn".
- Do not set the dial between the 8Hr mark and the Dusk To Dawn mark.
- Disconnect & Reconnect to the mains supply after setting the Lux dial to ensure the relay has been reset.

AQT-001 Specifications

Voltage	220-240V ~ 50Hz
Load	10A Resistive, 3A Inductive.
Lux	Adjustable 5-300 Lux
Switch Delay	~ 60 secs
IP Rating	IP54
Class	II
Timer	Adjustable from 1 - 8 Hours.
Operating Temp.	-30C - 50C

